



1804 Sandhill Road

Orem, UT 84058

866-257-4741

www.VictorioKitchenProducts.com



Victorio™ Stainless Steel Stovetop Popcorn Popper

Thank you for purchasing the Victorio Stainless Steel Stove Top Popper. Now you can enjoy perfect popcorn every time.

Your new Victorio Popper is guaranteed to be free from manufacturer defects for 90 days from the date of purchase. Should a defect be found or a problem arise, please contact Victorio Kitchen Products at 866-257-4741 or by email at service@victoriokitchenproducts.com.

The manufacturer reserves the right to replace or repair the item at their discretion. Often, repairs can be made by simply sending you a replacement part. Other repairs may require you to send the popper or part to Victorio Kitchen Products for repair or replacement. Items sent to Victorio Kitchen Products for repair or replacement should be sent postage paid to the address below.

Victorio Kitchen Products
ATTN: Returns
1804 Sandhill Road
Orem, Utah 84058

SAFETY PRECAUTIONS

- Wash pan thoroughly before using the first time.
- **DO NOT leave popper unattended while popping.** Popcorn should be stirred continually throughout the popping process.
- **DO NOT place an empty popper on a heated stove top.** The pan may melt or pit if heat cannot be transferred to oil and popcorn.
- **Hot oil can burn or catch fire if left too long on heated stove top.** Always attend heating of oil and do not heat it without adding other ingredients.
- **DO NOT allow skin near a pan that contains hot oil.** Hot oil may occasionally pop out of the pan while heating.
- Never use water or liquid to extinguish an oil fire. For best results, use an approved fire extinguisher.
- **DO NOT** let children make popcorn without close, adult supervision
- **DO NOT** touch gears. Fingers can get burned or pinched during popping operation.
- ***DO NOT USE POPPER FOR OTHER THAN INTENDED USE.***
- Tip: To keep gears turning smoothly, apply a small amount of vegetable oil to them from time to time.

MAKING PERFECT STOVE TOP POPCORN

POPPER ASSEMBLY

To remove the lid from the popper place your hand on the wooden handle & place your fingers around the flat metal lid clamp and squeeze it towards the wooden handle. This should lift the clamp and release it from the pot enabling the lid to be removed.

To put the lid back on the pot. Hold lid by the wooden handle, place lid peg in hole of popper pan. Line up clamp under wooden handle onto pan rim. Reach down with your fingers and squeeze the flat metal lid clamp and press down until the lid clamp snaps onto the pot rim.

PREHEAT STOVE

For Electric Range:

Set burner to medium high.

For Gas Range:

Set heat to medium.

TIP: Because stove top heat output varies, adjust temperature as needed so popping is completed about three minutes after the popcorn is added to pan.

POPPING POPCORN

Tip: Use fresh popcorn. Old popcorn loses its moisture and won't pop well. Buy popcorn fresh and keep it fresh.

1. Place 1-3 tablespoons of oil and 1/2 cup popcorn in popper and place on stove top.
TIP: Don't use butter in place of oil, butter burns easily. Melted butter can be added to popped corn prior to serving.
2. Slowly and continuously turn handle.
3. When stirring becomes difficult or pan is visible full, remove from heat. Empty popcorn into serving bowl, season and enjoy.
TIP: you can make half a batch by using 1/2-1 1/2 tablespoon of oil and 1/4 cup of popcorn.